

# 12' SENTINEL STALL SIDE VENTED LUMBER KIT

////////////////////////////////////

LKSV12



FOR MORE INFORMATION, QUESTIONS, OR CONCERNS,  
PLEASE CONTACT TARTER CUSTOMER SERVICE:  
**1.800.RED.GATE** (1.800.733.4283)

## **KIT INCLUDES:**


- (19) 46-3/4" X 6-3/4" TONGUE AND GROOVE
- (1) 46-3/4" X 6-3/4" GROOVE ONLY
- (1) 46-3/4" X 5-3/4" GROOVE ONLY

## **TOOLS NEEDED:**

- PHILLIPS SCREW DRIVER
- DRILL
- RUBBER Mallet
- TAPE MEASURE
- CIRCULAR SAW

## **INSTALLATION NOTES:**

- It is recommended to have the stall panel in its final location before installing the lumber kit.
- All boards have a beveled edge. Please be aware for appearance consistency.
- A rubber mallet may be used to secure the boards tightly without damaging them.

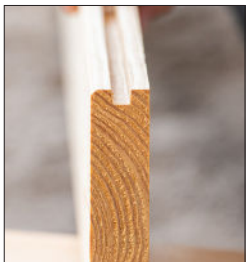

GROOVE



TONGUE



BEVELED EDGE

## **INSTALLATION INSTRUCTIONS:**

- 1.** Install 19 - 46-3/4" x 6-3/4" tongue and groove boards, with groove towards the frame. The first few boards can be installed by leaning at an angle and sliding in the channel.
- 2.** Install 1 - 46-3/4" x 6-3/4" board, with groove only. Use notch to install final boards.
- 3.** Install 1 - 46-3/4" x 5-3/4" board, with groove only. Make sure the non-grooved side is towards the frame. Last board may need to be cut to fit properly. Cut must be made to the flat edge.
- 4.** Secure lumber with 4 - #10 x 1" Phillips screws, using the pre-drilled holes in the channel. It is important to screw the lumber in so the boards do not come out. (Included in stall hardware)

